
Power and Switch Location



UGAD Ultra Glo –Dual Ceramic Strip Heater with or without lights

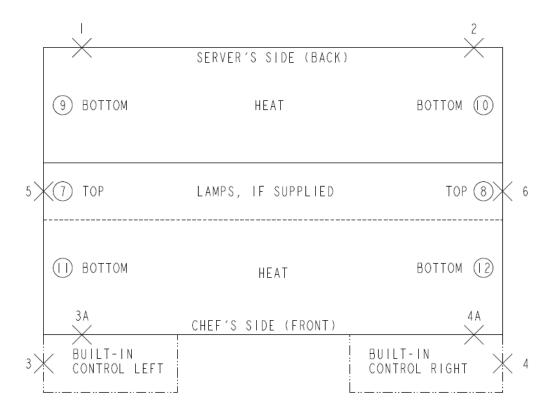

<u>Power</u>: Numbers indicate potential power locations.

- "X" indicates that the power location is on the side of the warmer.
- Locations 9, 10,11 & 12 are on the bottom of the warmer and are intended to be used in conjunction with the optional legs supplied by Hatco. Note: maximum of 3 circuits down the leg.

<u>Switch</u>: There are only two switch location options for this model: on the front of the built-in control box, either on the left or right. Models with built-in control box must have the power location at the end of the control box – either location 3 or 4 depending upon which control box location you choose.

Note: Remote controls are available and recommended.