


Power and Switch Location



UGA

Ultra-Glo – Ceramic Strip Heater

Note: View is from the top.

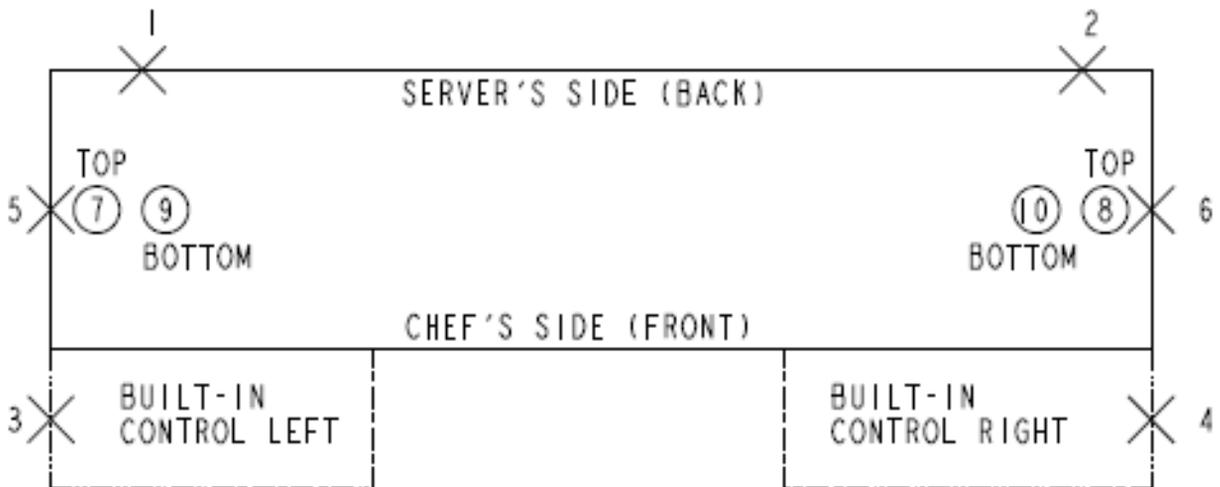

Power: Numbers indicate potential power locations.

- "X" indicates that the power location is on the side of the warmer.

- Locations 9 & 10 are on the bottom of the warmer and are intended to be used in conjunction with the optional legs supplied by Hatco. Note: maximum of 3 circuits down the leg.

Switch: There are only two switch location options for this model: on the front of the built-in control box, either on the left or right.

Models with built-in control box must have the power location at the end of the control box – either location 3 or 4 depending upon which control box location you choose.

Note: Remote controls are available and recommended.