



# Maskerade® Undercounter Induction Warmer (IWRM-UT-05) Installation Considerations

The Maskerade® Undercounter Induction Warmer IWRM-UT-05 replaces the IWRM-UT-06 model for undercounter warming applications. This warmer is designed to install under natural and simulated stone materials that are a standard 20mm or 30mm thickness.

Most importantly for the installation is that the main flat, top surface of the warmer must be positioned 30mm below the countertop. Also, ensure there is no metal between the top of the warmer and the countertop.


See the illustrations below for typical installations.



Typical installation with substrate under countertop.



## FOR 20MM COUNTERTOPS

- Leave the 10mm spacers attached to the top of the warmer.
- Make a cutout in the substrate materials (such as  $\frac{3}{4}$  inch plywood) large enough for the entire body of the warmer to fit through and against the countertop.
- Attach the mounting brackets to the substrate using appropriate screws.
- Tighten the warmer so that the spacers are tight against the countertop.

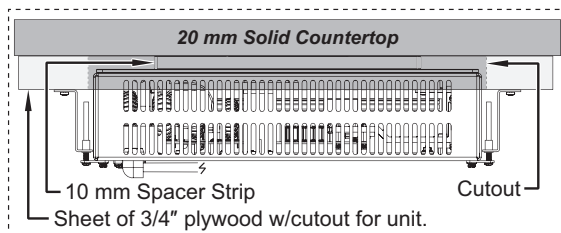

## FOR 30MM COUNTERTOPS

- Remove the 10mm spacers on the top of the warmer.
- If there is a substrate, make a cutout in the substrate materials large enough for the entire body of the warmer to fit through and against the countertop.
- If there is no substrate, there must be strips for attaching the mounting brackets installed to the side of the warmer. Strips must be at least  $\frac{1}{2}$  inch thick wood.
- Attach the mounting brackets to the substrate or strips.
- Tighten the warmer so that the top of the warmer without spacers is tight against the countertop.

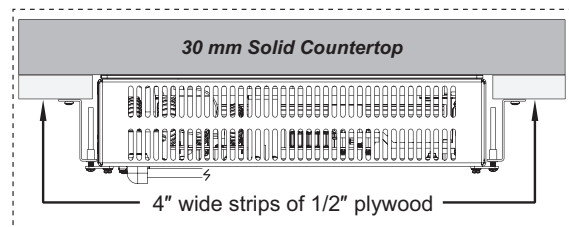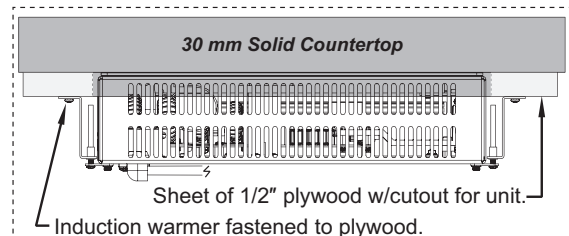

**After installing, be sure to perform the trivet calibration process described in the manual.**